


Magic Touch TTC Laser Paper

Laser transfer paper for hard surfaces
SKU CPM

Printing Instructions

- For OKI 831TS, OKI 920WT and OKI 711WT: set the media type setting to **Label 1**
- For any other printer: Start with a Heavy setting and increase to Transparency or Label if you are seeing streaks/smearing.
- Print design on the blank side of the paper in REVERSE or in other words, flip it horizontally. This can be done within the design program or printer's settings (see your printer manual for more information).

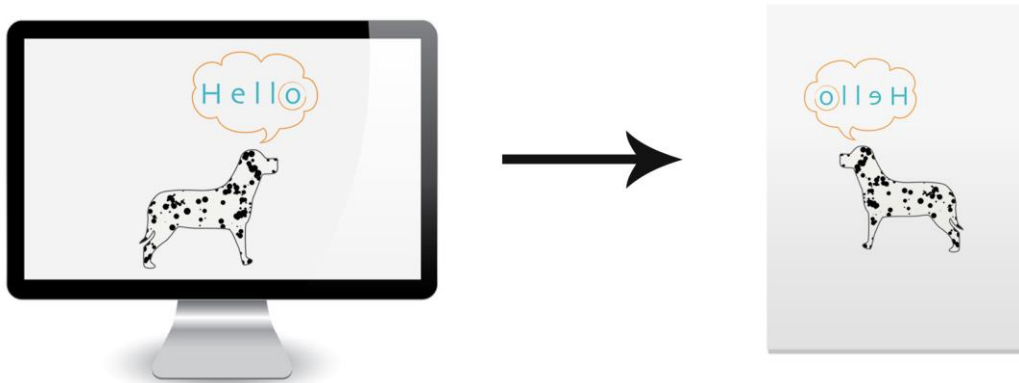

- The paper should be fed into copier/printer with the short dimension first, ideally using a straight path bypass tray.
- We recommend single sheet feeding

Application Instructions

Heat Press Only

1. Prepare heat press at 360 degrees F.
2. Press fabric first to ensure flatness and to remove any moisture; let it cool completely
3. Place heat transfer paper with the image facing down in the desired position on fabric.
4. Using above recommended temperature, apply firm pressure (60 PSI or greater) for 10-15 seconds.
5. After pressing, do not remove from the lower heating platen, allow to cool for 10-15 seconds, and then remove the backing paper in a smooth and consistent motion.